

Category 4, EN 954-1 PNOZ Ex



Safety relay for monitoring E-STOP pushbuttons and safety gates in potentially explosive atmospheres

Approvals

PNOZ Ex		
	◆	
	◆	
	◆	

Unit features

- ▶ Positive-guided relay outputs:
 - 3 safety contacts (N/O), instantaneous
 - 1 instantaneous auxiliary contact (N/O) in the intrinsically safe area
 - 1 instantaneous auxiliary contact (N/O) for fusing in the intrinsically safe area
 - 1 instantaneous auxiliary contact (N/C) in the non-intrinsically safe area
- ▶ Connection options for:
 - E-STOP pushbutton
 - Safety gate limit switch
 - Reset button
- ▶ LED indicator for:
 - Switch status channel 1/2
 - Supply voltage
- ▶ Ex area II (1)GD [EEx ia] IIB/IIC
- ▶ See order reference for unit types

as (standards used: EN 50014 +A1-A2 and EN 50020).

The unit is suitable for non-contact barriers (e.g. light curtains) because a dynamic start is possible.

Safety features

The relay conforms to the following safety criteria:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety function remains effective in the case of a component failure.
- ▶ The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.


Unit description

The safety relay meets the requirements of EN 60204-1 and IEC 60204-1 and may be used in applications with

- ▶ E-STOP pushbuttons
- ▶ Safety gates

The safety relay provides an intrinsically safe output circuit and volt-free contacts for potentially explosive areas.

Block diagram

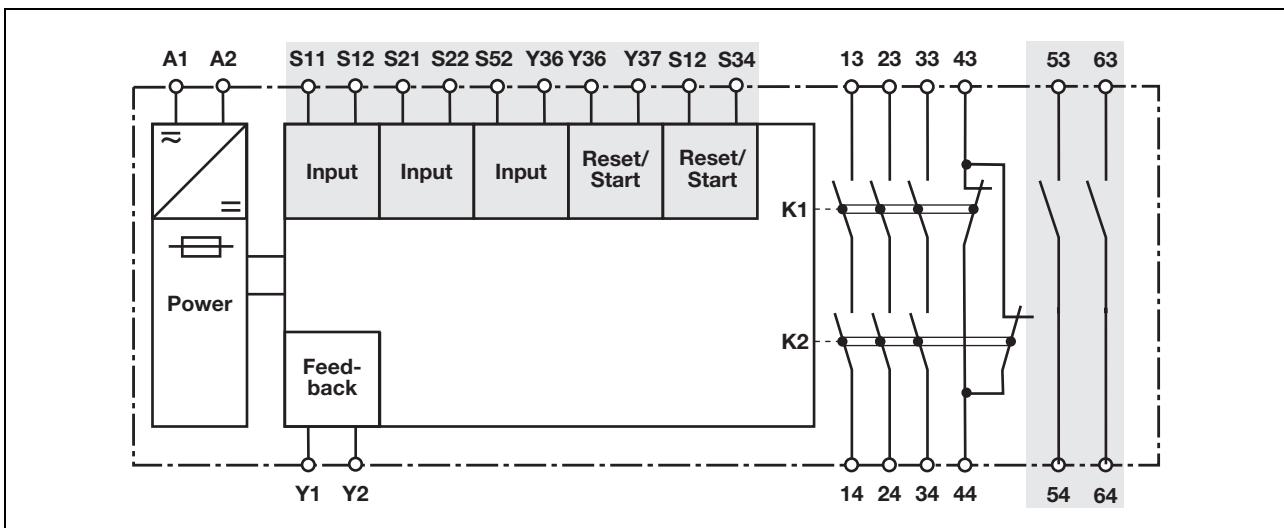


Grey area = intrinsically safe area

Category 4, EN 954-1 PNOZ Ex

Function description

- ▶ Dual-channel operation with detection of shorts across contacts: redundant input circuit, detects
 - earth faults in the reset and input circuit,
 - short circuits in the input circuit and, with a monitored reset, in the reset circuit too,
 - shorts between contacts in the input circuit.
- ▶ Automatic start: Unit is active once the input circuit has been closed.
- ▶ Manual reset: Unit is active once the input circuit is closed and then the reset circuit is closed.
- ▶ Monitored reset: Unit is active once
 - the input circuit is closed and then the reset circuit is closed
 - the reset circuit is closed and then opened again.
 - the reset circuit is closed and then opened again once the input circuit is closed.
- ▶ Increase in the number of available contacts by connecting contact expander modules or external contactors/relays.

Timing diagram

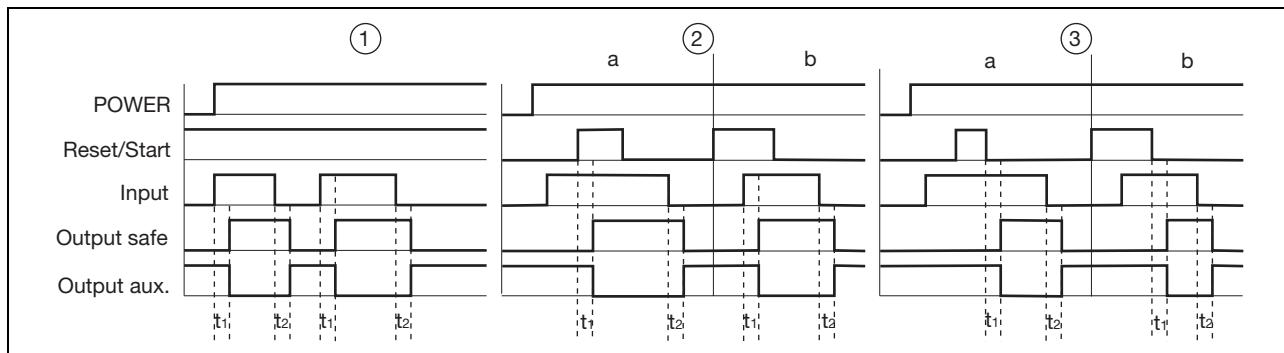

Key

- ▶ Power: Supply voltage
- ▶ Reset/start: Reset circuit S12-S34, Y36-Y37, Y1-Y2
- ▶ Input: Input circuits S11-S12, S21-S21, S52, Y36
- ▶ Output safe: Safety contacts 13-14, 23-24, 33-34
- ▶ Output aux: Auxiliary contacts 41-42, 53-54, 63-64
- ▶ ①: Automatic reset
- ▶ ②: Manual reset
- ▶ ③: Monitored reset
- ▶ a: Input circuit closes before reset circuit
- ▶ b: Reset circuit closes before input circuit
- ▶ t₁: Switch-on delay
- ▶ t₂: Delay-on de-energisation

Wiring

Please note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Outputs 13-14, 23-24, 33-34 are safety contacts, outputs 41-42, 53-54, 63-64 are auxiliary contacts (e.g. for display).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Calculation of the max. cabling runs I_{max} in the input circuit:

$$I_{\max} = \frac{R_{l\max}}{R_l / \text{km}}$$

R_{lmax} = max. overall cable resistance (see technical details)

R_l / km = cable resistance/km

- ▶ Use copper wire that can withstand 60/75 °C.

Category 4, EN 954-1 PNOZ Ex

Preparing for operation

- ▶ Supply voltage

Supply voltage	AC	DC
	<pre> graph LR A1((A1)) --- L1[L1] A2((A2)) --- N[N] </pre>	<pre> graph LR A1((A1)) --- Line[] Line --- N[N] </pre>

- ▶ Input circuit

Input circuit	Single-channel	Dual-channel
E-STOP with detection of shorts across contacts	<pre> graph LR S11((S11)) --- Y36((Y36)) S52((S52)) --- Y36 Y36 --- S21((S21)) S21 --- S22((S22)) S22 --- S12((S12)) S12 --- T1[T1] </pre>	<pre> graph LR S111((S11)) --- Y361((Y36)) S521((S52)) --- Y361 Y361 --- S211((S21)) S211 --- S221((S22)) S221 --- S121((S12)) S121 --- T1[T1] S112((S11)) --- Y362((Y36)) S522((S52)) --- Y362 Y362 --- S212((S21)) S212 --- S222((S22)) S222 --- S122((S12)) S122 --- T2[T2] </pre>
Safety gate with detection of shorts across contacts	<pre> graph LR S11((S11)) --- Y36((Y36)) S52((S52)) --- Y36 Y36 --- S21((S21)) S21 --- S22((S22)) S22 --- S12((S12)) S12 --- T1[T1] </pre>	<pre> graph LR S111((S11)) --- Y361((Y36)) S521((S52)) --- Y361 Y361 --- S211((S21)) S211 --- S221((S22)) S221 --- S121((S12)) S121 --- T1[T1] S112((S11)) --- S122((S12)) S522((S52)) --- S122 S122 --- S212((S21)) S212 --- S222((S22)) S222 --- T2[T2] </pre>

- ▶ Reset circuit

Reset circuit	Reset from the non-intrinsically safe area	Reset from the intrinsically safe area
Automatic reset	<pre> graph LR S12((S12)) --- S34((S34)) S34 --- Y1((Y1)) Y1 --- S12 S12 --- T1[T1] </pre>	<pre> graph LR S12((S12)) --- S34((S34)) S34 --- Y1((Y1)) Y1 --- S12 S12 --- T1[T1] S12 --- S34 S34 --- Y2((Y2)) Y2 --- S12 </pre>
Manual reset	<pre> graph LR Y1((Y1)) --- S3((S3)) Y2((Y2)) --- S3 S12((S12)) --- S34((S34)) S34 --- S12 S12 --- T1[T1] </pre>	<pre> graph LR Y1((Y1)) --- S3((S3)) Y2((Y2)) --- S3 S12((S12)) --- S34((S34)) S34 --- S12 S12 --- T1[T1] S12 --- S34 S34 --- Y1 Y1 --- S12 </pre>
Monitored reset	<pre> graph LR Y1((Y1)) --- S3((S3)) Y2((Y2)) --- S3 S12((S12)) --- S34((S34)) S34 --- S12 S12 --- T1[T1] </pre>	<pre> graph LR Y1((Y1)) --- S3((S3)) Y2((Y2)) --- S3 S12((S12)) --- S34((S34)) S34 --- S12 S12 --- T1[T1] S12 --- S34 S34 --- Y36((Y36)) Y36 --- S12 </pre>

Category 4, EN 954-1 PNOZ Ex

► Feedback loop


Feedback loop	Reset from the non-intrinsically safe area	Reset from the intrinsically safe area
Contacts from external contactors (manual reset)		
Contacts from external contactors (monitored reset)		

► Key

S1/S2	E-STOP pushbutton/ safety gate switch
S3	Reset button
	Switch operated
	Gate open
	Gate closed

Category 4, EN 954-1 PNOZ Ex


Terminal configuration

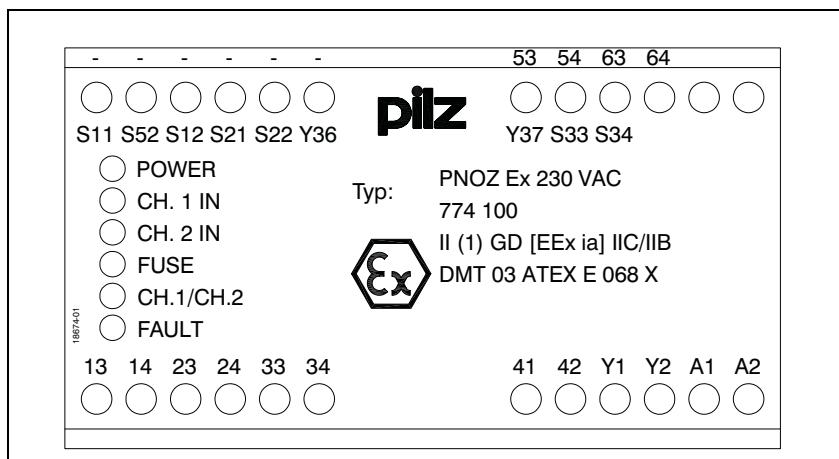

Installation

- ▶ The safety relay should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Use the notch on the rear of the unit to attach it to a DIN rail.
- ▶ Ensure the unit is mounted securely on a vertical DIN rail (35 mm) by using a fixing element (e.g. retaining bracket or an end angle).
- ▶ Always install the unit outside the potentially explosive area. Only the intrinsically safe output circuit (terminals S11, S12, S21, S22, S34, S52, Y36, Y37 and GND) and the volt-free contacts (terminals 53, 54 and 63, 64) may be brought into the potentially explosive area.
- ▶ Air gaps between uninsulated parts of intrinsically safe circuits and earthed metal parts must be a minimum of 3 mm; air gaps between uninsulated parts of intrinsically safe circuits and uninsulated parts of non-intrinsically safe circuits must at least conform with the values required in Table 4, Amendment 4 of EN 50020

Dimensions

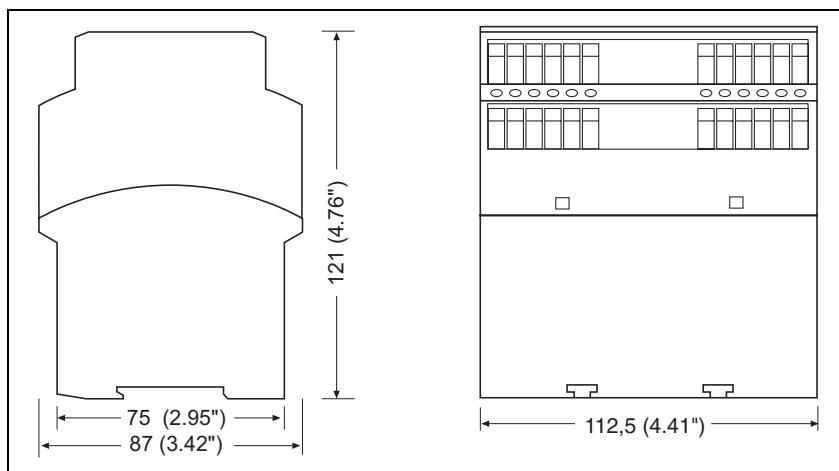


Category 4, EN 954-1 PNOZ Ex

Notice

This data sheet is only intended for use during configuration. For installation and operation, please refer to the operating instructions supplied with the unit.

Service life graph

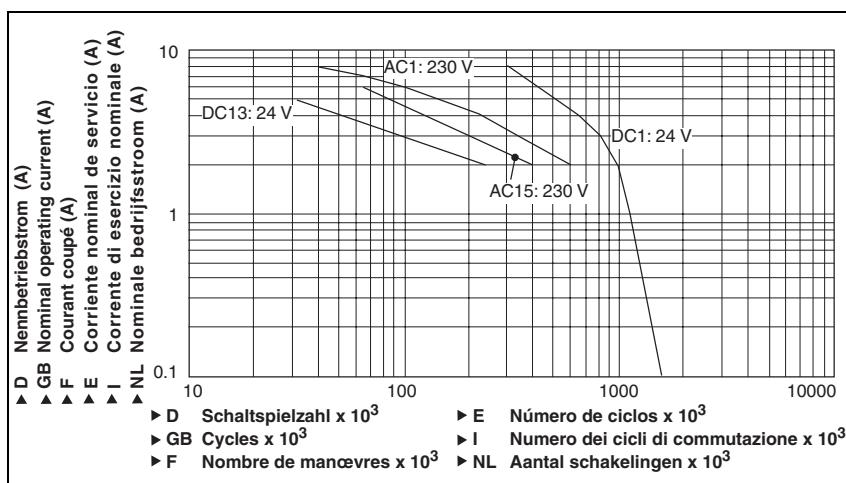

Technical details

Electrical data

Supply voltage	115 V, 120 V, 230 V
Supply voltage U _B AC	115 V, 120 V, 230 V
Voltage tolerance	-15 %/+10 %
Power consumption at U _B AC	8.0 VA
Frequency range AC	50 - 60 Hz
Voltage and current at input circuit DC: 6.0 V	25.0 mA
reset circuit DC: 6.0 V	15.0 mA
feedback loop DC: 24.0 V	20.0 mA
Output contacts in accordance with EN 954-1 Category 4	Safety contacts (N/O): 3 Auxiliary contacts, intrinsically safe (N/O): 2 Auxiliary contacts (N/C): 1
Utilisation category in accordance with EN 60947-4-1	
Safety contacts: AC1 at 240 V	I _{min} : 0.01 A, I _{max} : 4.00 A P _{max} : 1000 VA
Safety contacts: DC1 at 24 V	I _{min} : 0.01 A, I _{max} : 2.0 A P _{max} : 48 W
Auxiliary contacts (intrinsically safe): DC1 at 30 V	I _{min} : 0.01 A, I _{max} : 0.5 A P _{max} : 10 W
Auxiliary contacts: AC1 at 240 V	I _{min} : 0.01 A, I _{max} : 4.0 A P _{max} : 1000 VA
Auxiliary contacts: DC1 at 24 V	I _{min} : 0.01 A, I _{max} : 2.0 A P _{max} : 48 W
Utilisation category in accordance with EN 60947-5-1	
Safety contacts: AC15 at 230 V	I _{max} : 4.0 A
Safety contacts: DC13 at 24 V (6 cycles/min)	I _{max} : 2.0 A
Auxiliary contacts: AC15 at 230 V	I _{max} : 4.0 A
Auxiliary contacts: DC13 at 24 V (6 cycles/min)	I _{max} : 2.0 A
Contact material	AgSnO ₂ + 0.2 µm Au

Category 4, EN 954-1 PNOZ Ex

Electrical data

External contact fuse protection to **EN 60947-5-1**

Blow-out fuse, quick

Safety contacts:	4 A
------------------	------------

Auxiliary contacts:	4 A
---------------------	------------

Blow-out fuse, slow

Safety contacts:	4 A
------------------	------------

Auxiliary contacts:	4 A
---------------------	------------

Circuit breaker 24 VAC/DC, characteristic B/C

Safety contacts:	4 A
------------------	------------

Auxiliary contacts:	4 A
---------------------	------------

Max. overall cable resistance R_{lmax} input circuits, reset circuits

single-channel at U_B AC	40 Ohm
----------------------------	---------------

dual-channel without detect. of shorts across contacts at U_B AC	80 Ohm
--	---------------

dual-channel with detect. of shorts across contacts at U_B AC	15 Ohm
---	---------------

Max. line capacitance

EX IIB	2 μF
--------	----------------------------

EX IIC	1 μF
--------	----------------------------

Max. line inductance

EX IIB	200 μH
--------	------------------------------

EX IIC	100 μH
--------	------------------------------

Times

Switch-on delay

with automatic reset typ.	150 ms
---------------------------	---------------

with automatic reset max.	200 ms
---------------------------	---------------

with automatic reset after power on typ.	165 ms
--	---------------

with automatic reset after power on max.	210 ms
--	---------------

with manual reset typ.	145 ms
------------------------	---------------

with manual reset max.	200 ms
------------------------	---------------

with monitored reset typ.	115 ms
---------------------------	---------------

with monitored reset max.	150 ms
---------------------------	---------------

Delay-on de-energisation

with E-STOP typ.	10 ms
------------------	--------------

with E-STOP max.	30 ms
------------------	--------------

with power failure typ.	110 ms
-------------------------	---------------

with power failure max.	150 ms
-------------------------	---------------

Recovery time at max. switching frequency 1/s

after E-STOP	50 ms
--------------	--------------

after power failure	200 ms
---------------------	---------------

Min. start pulse duration with a monitored reset	30 ms
--	--------------

Simultaneity, channel 1 and 2	150 ms
-------------------------------	---------------

Supply interruption before de-energisation	35 ms
--	--------------

Environmental data

EMC **EN 60947-5-1, EN 61000-6-2**

Vibration in accordance with **EN 60068-2-6**

Frequency	10 - 55 Hz
-----------	-------------------

Amplitude	0.35 mm
-----------	----------------

Climatic suitability	EN 60068-2-78
----------------------	----------------------

Airgap creepage	VDE 0110-1
-----------------	-------------------

Ambient temperature	-20 - 55 °C
---------------------	--------------------

Storage temperature	-40 - 85 °C
---------------------	--------------------

Protection type

Mounting (e.g. control cabinet)	IP54
---------------------------------	-------------

Housing	IP40
---------	-------------

Terminals	IP20
-----------	-------------

Category 4, EN 954-1 PNOZ Ex

Mechanical data

Housing material	
Housing	PPO UL 94 V0
Front	ABS UL 94 V0
Max. cross section of external conductors with screw terminals	
1 core flexible	0.20 - 4.00 mm ² , 24 - 10 AWG
2 core, same cross section, flexible: with crimp connectors, without insulating sleeve	0.20 - 2.50 mm ² , 24 - 14 AWG
without crimp connectors or with TWIN crimp connectors	0.20 - 2.50 mm ² , 24 - 14 AWG
Torque setting with screw terminals	0.60 Nm
Dimensions	
Height	87.0 mm
Width	112.5 mm
Depth	121.0 mm
Weight	720 g

The standards current on **05/04** apply.

Order reference

Type	Features	Terminals	Order no.
PNOZ Ex	230 VAC	Screw terminals	774 100
PNOZ Ex	115 VAC	Screw terminals	774 104
PNOZ Ex	120 VAC	Screw terminals	774 105